


Head Office
17 - 19 David Lee Rd Hallam Victoria 3803
PO BOX 1143 Narre Warren MDC 3805
T 03 9796 3333

atkar.com.au

WA/SA Region
PO Box 710 Joondaliup DC 6919
T 08 6323 5662



Vogl Integrated Access Panel Installation

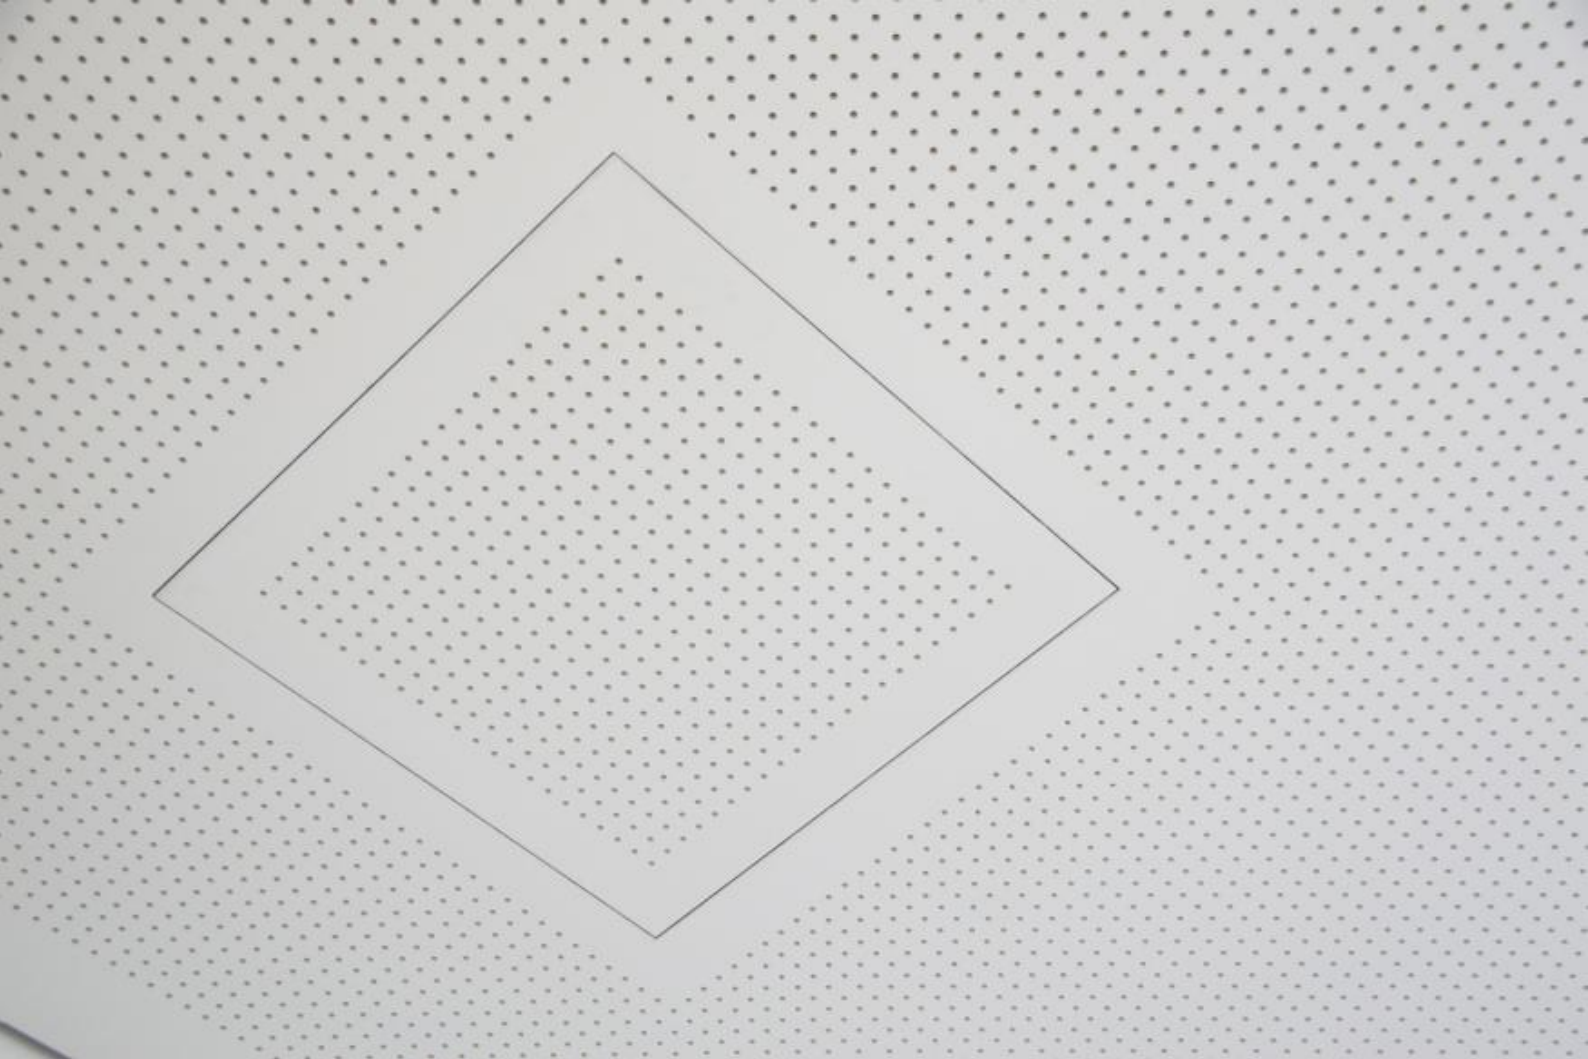

Integrated Access Panel hatches are available to match the perforation pattern you have installed on your ceiling.



Vogl Integrated Access Panel Installation

For any advice or support on your VoglFuge & Access Panel installation please contact Atkar Group on 03 9796 3333.

Mark the intended position of the access panels on the ceiling.

Ensure the cutout is 4 mm larger than Vogl Access Panel / clear passage size.

Cut out marked section, making sure there are no panel joints within area of cutout.




To achieve the most accurate dimensions of the cutout, it is best to use a plasterboard plane and/or sandpaper / abrasive mesh.




Slightly chamfer the visible side of the VoglFuge panel to facilitate filling of joints later on.

Insert frame of Vogl Access Panel and hold it in place by means of a mounting aid matching perforation pattern.

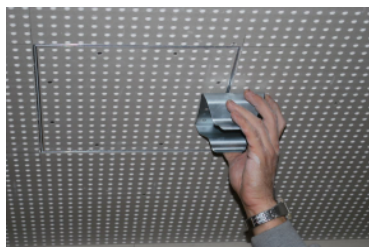


Predrill Vogl Access Panel frame with metal drill and fasten it with Vogl panel screws

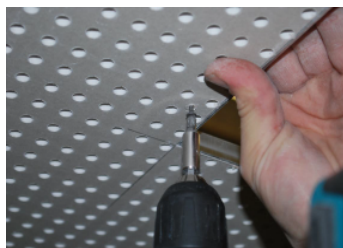


Insert the Access Panel lid and check closing function.

Cover a few rows of perforation holes directly adjacent to access panel with masking tape.

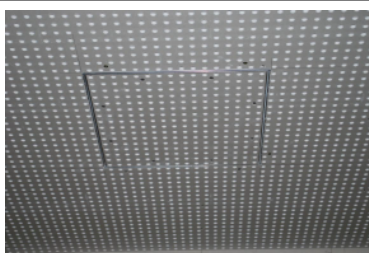

Apply filling compound to access opening, remove masking tape rightaway and scrape away any excess filler to make it flush with ceiling surface.

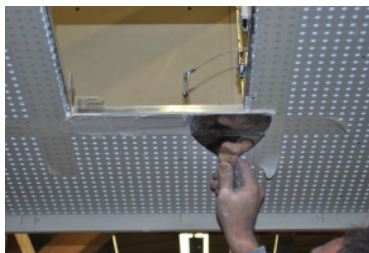

After filler has dried, sand any edges or protruding material.

If border is required around Access Panel - use Vogl Frieze Tape after filler has dried.



Painting Note: Access Panel should remain in ceiling in order to obtain uniform coating. Make sure to clean joint between frame and lid after every spray application to ensure Access Panel does not get stuck.